

# Instructions For 32", 46", 58", 70", & 94" Red Cedar Contour Bench

## Tools Required for Assembly

7/16" Socket or Adjustable Wrench  
2# Squarehead Bit (included)  
Hammer for tapping bolts and screws.

## Hardware List

8- 1/4 x 3" Hex Bolts  
8- 1/4" Hex Nuts  
16- 1/4 x 1" Fender Washers  
8- 3" Screws

## Parts List

1- Bench Top  
4- Bench Legs



Hex Bolts 

Screw 

Fender Washer 

Nut 

Pre-drilled Hole 

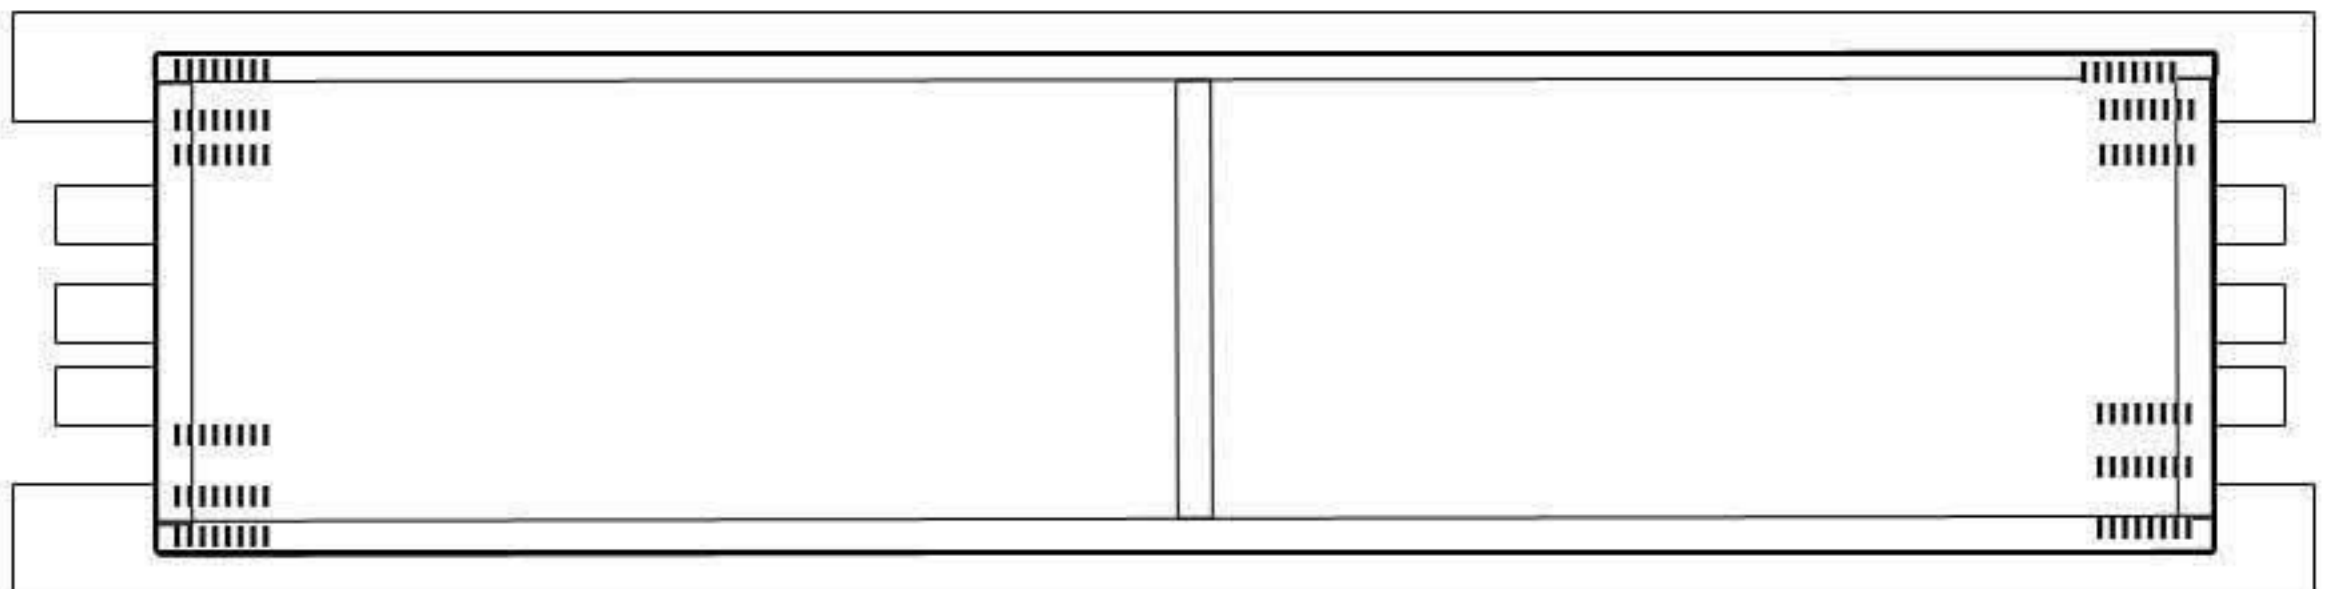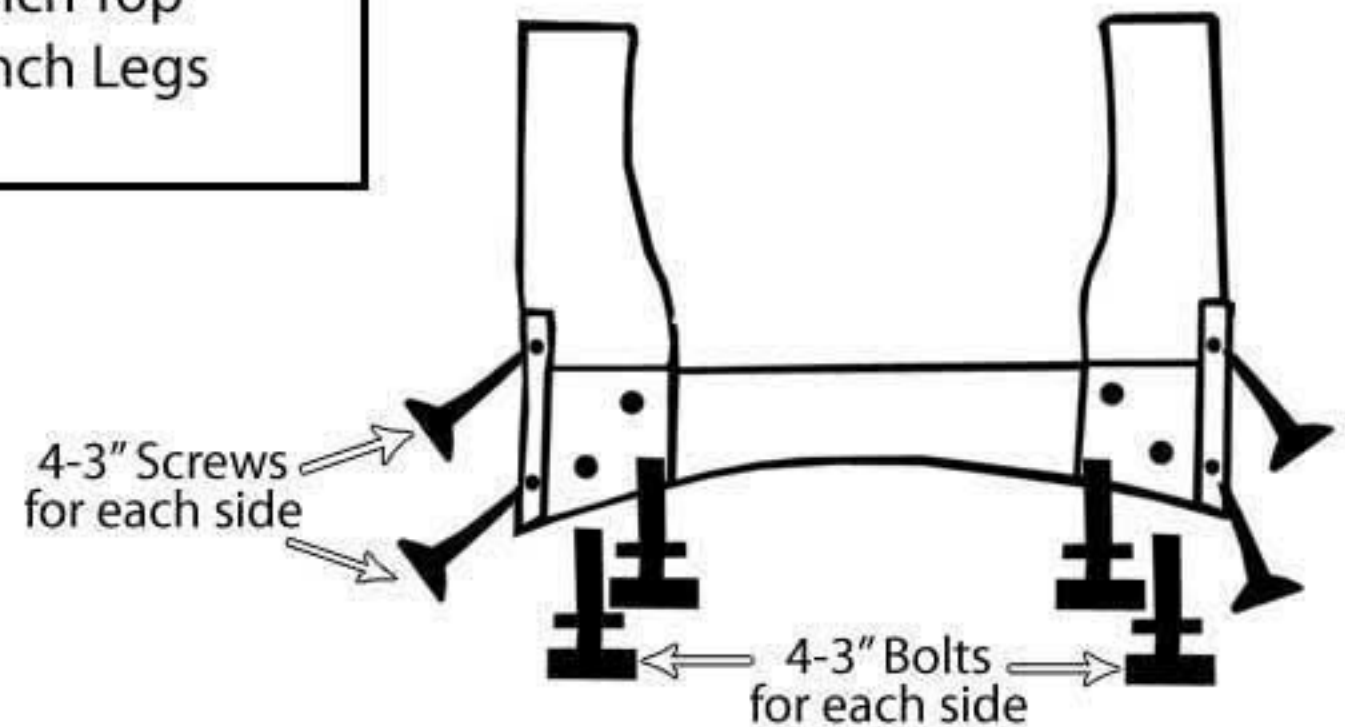

### Step 1:

Lay the bench with the top upside down on a clean flat surface. Place each bench leg on the outside aligning with the predrilled holes. Tighten the bolts.

### Step 2:

Next put the 3" screws in the small predrilled holes. It is easier to put the bolt part of the way into the predrilled hole and then tap the rest of the way with a hammer.

### Step 3:

Repeat with each leg.