Instructions For 46", 58", 70", & 94" Red Cedar Contour Table

Items: ELY46CTT, ELY58CTT, ELY70CTT, ELY94CTT, ELY46CTTBB, ELY58CTTBB, ELY70CTTBB, ELY94CTTBB, ELY46CTTB, ELY58CTTB, ELY70CTTBB, ELY94CTT4BB, ELY46CTT4BB, ELY58CTT4BB, ELY70CTT4BB, ELY94CTT4BB,


ELY46CTT4B, ELY58CTT4B, ELY70CTT4B, ELY94CTT4B


Tools Required for Assembly

7/16" Socket or Adjustable Wrench 2# Squarehead Bit (included) Hammer for tapping bolts and screws.

Hardware List

- 8- 2 1/2" Hex Bolts
- 8- Hex Nuts
- 24- 1/4 x 1" Fender Washers
- 8- 1/4 x 2 1/2" Lags

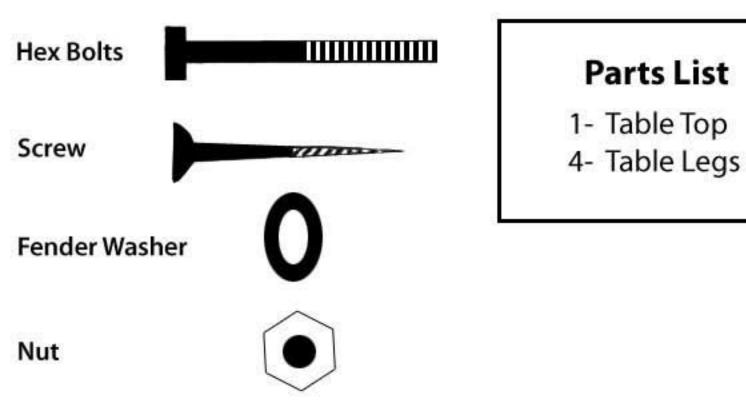

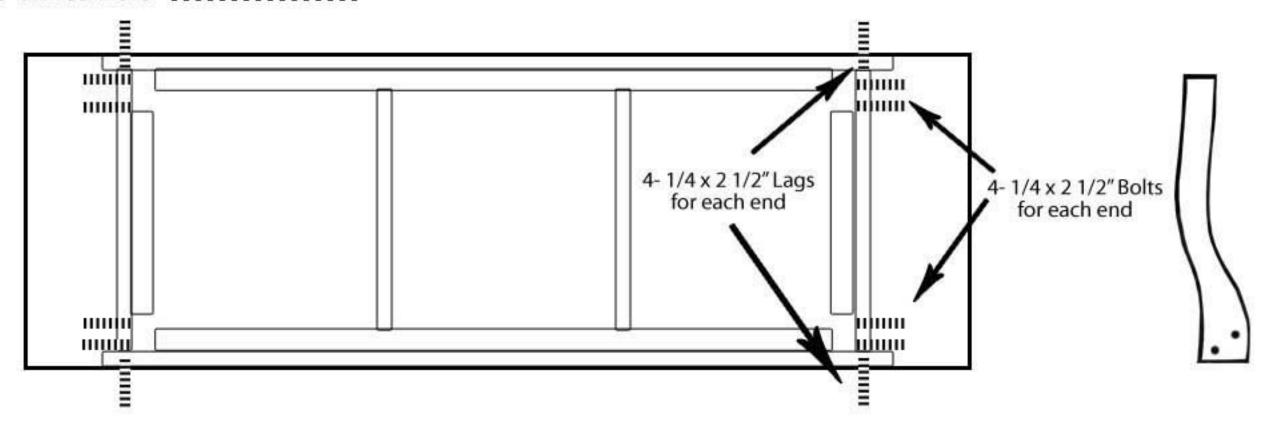

Step 1:

Lay the table top upside down on a clean flat surface. Place each leg on the outter side into the notched out cross member using the 2 1/2" bolt.

Step 2:

Next put the 2 1/2" Lags through the side rail piece into the leg.

Step 3:

Repeat with each leg.

Instructions For 32", 46", 58", 70", & 94" Red Cedar Contour Bench


Items: ELY46CTB, ELY58CTB, ELY70CTB, ELY94CTB, ELY46CTTB, ELY58CTTB, ELY70CTTB, ELY94CTTB, ELY46CTT4B, ELY58CTT4B, ELY70CTT4B, ELY94CTT4B, ELY32CTB

Tools Required for Assembly

7/16" Socket or Adjustable Wrench 2# Squarehead Bit (included) Hammer for tapping bolts and screws.

Hardware List

- 8- 1/4 x 3" Hex Bolts
- 8- 1/4" Hex Nuts
- 16- 1/4 x 1" Fender Washers
- 8- 3" Screws

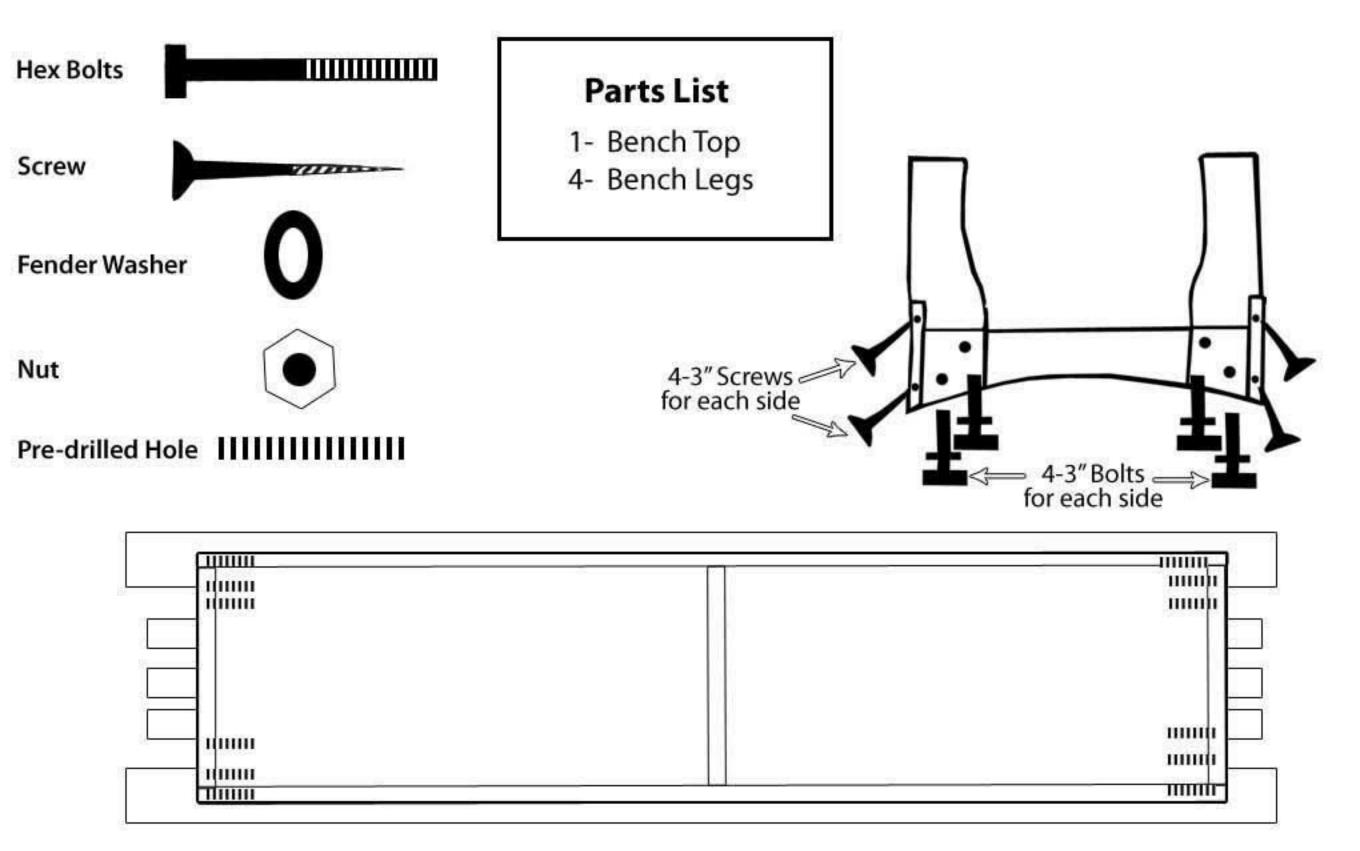

Step 1:

Lay the bench with the top upside down on a clean flat surface. Place each bench leg on the outside aligning with the predrilled holes. Tighten the bolts.

Step 2:

Next put the 3" screws in the small predrilled holes. It is easier to put the bolt part of the way into the predrilled hole and then tap the rest of the way with a hammer.

Step 3:

Repeat with each leg.