

# Adirondack Rocking Chair Assembly Instructions

## Step 1


Fasten the front legs to the seat supports with 3" hex bolts, being sure the long end is toward the front (see diagram). Use a large washer on each end of the bolts. Tighten the nuts by hand until just snug (DO NOT TIGHTEN ALL THE WAY). Now insert two 2 1/2" screws per side into the pre-drilled holes on the front of the seat and turn them until the heads are sunk in even with the wood. Then go back and tighten the bolts the rest of the way.

## Step 2

Fasten the back legs to the inner sides of the seat supports using 3" hex bolts with washers on each end and a nut to secure them. The flat end of each back leg should be at the bottom. Make sure they are facing the correct way so the seat back can rest squarely against them.


## Step 3

Place the seat back so that the upper back support rests on top of the back legs. Adjust the back legs until lower back support fits into the notches on the back of the seat. Fasten four 3" screws through the upper back support and into the top of the back legs. Next, fasten four screws through the lower back support and down into the seat support.

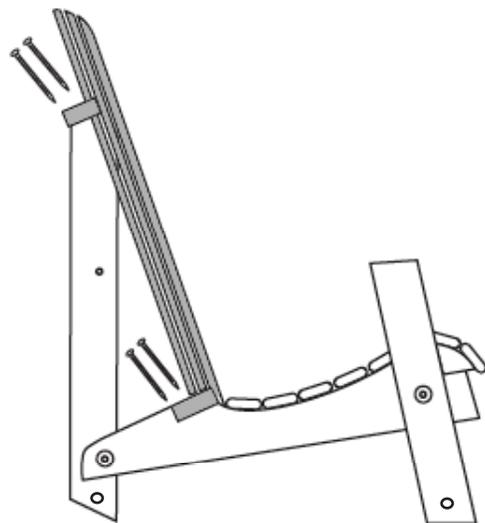


## Step 4

Fasten the arms first to the back legs using 3-1/2" carriage bolts, using a large washer under the nut only. Now put two 2 1/2" screws (per side) down through the predrilled holes in the arm and into the front legs.

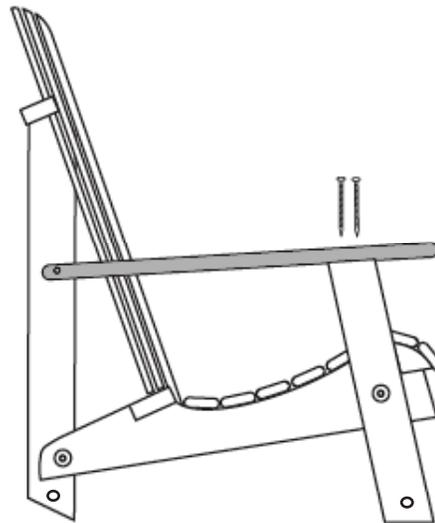

Instructions used for item code: WF5110

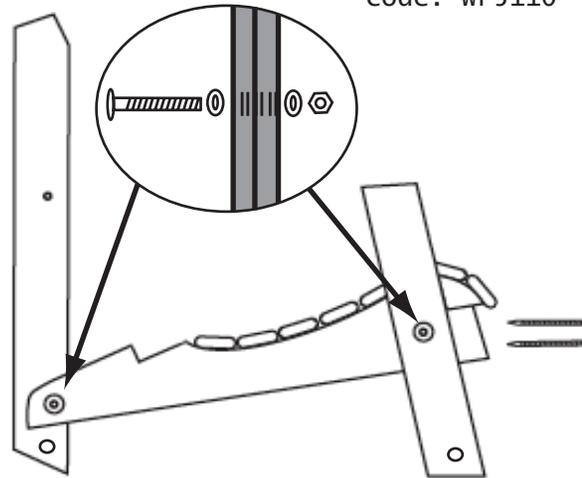

## Tools Required for Assembly

Hammer  
Ratchet with 7/16" Socket  
Pliers (suggested)  
#2 Drill Bit (supplied)

## Parts List

2 Rear Legs  
2 Front Legs  
2 Rocker Feet  
2 Arm Rests  
1 Seat Back  
1 Seat

## Hardware

8 1/4 x 3" Hex Head Bolts  
2 1/4" x 3 1/2" inch Carriage Bolts  
18 1/4" Fender Washers  
10 1/4" Nuts  
8 3" Screws  
8 2 1/2" Screws

## Step 5

The last step is to attach the rocker feet using 3" hex head bolts. Make sure the front end of each rocker foot is on the inside of the front leg and that the back end of each rocker foot is on the outside of the back legs. Be sure there is a washer on each end of the bolt before securing with a nut.

